

Mitel –Enable Teleworker on IP6920

- 1) Ensure your Mitel IP6920 is powered up and connected to the phone system.
- 2) Press the settings button.
- 3) Use the silver scroll wheel to navigate to 'Config Teleworker' option.
- 4) Press the centre of the silver scroll wheel to select the option.
- 5) Enter the IP address 81.128.228.163
 - a. To do this press 8 1 # 1 2 8 # 2 2 8 # 1 6 3
- 6) Press 'Save'.
- 7) Press the key with the Red handset to return to the main screen.

The handset has now been enabled as a teleworker phone and as such will work from any broadband connection in the world.